CLASSIFICATIO ()

INFORMATION FROM FOREIGN DOCUMENTS OR RADIO BROADCASTS CD NO. 50X1-HUM

COUNTRY

Poland

DATE OF

DATE DIST.

REPORT

INFORMATION

1947

10 Jun 1949

SUBJECT

PUBLISHED

Scientific - Aircraft instruments

HOW

Monthly periodical

WHERE PUBLISHED

Poland

NO. OF PAGES

DATE

PUBLISHED

Hov 1947

SUPPLEMENT TO

LANGUAGE

Polish.

REPORT NO.

THIS IS UNEVALUATED INFORMATION

SOURCE

STATE

Sheavelat Foleka, Vol III, No 11 (30), 1947 (FIRE For Abs 72796 -- Translation requested.)

OPERATION AND CONSTRUCTION OF RADIO ALTIMETER

Rudolph Urich, First/Lieutement Aerial Observer

The altitude of an aircraft is still being determined by the traditional barometric method; however, this method has many faults. On the negative side are errors resulting from the estimated calculation of temperature and atmospheric pressure on the earth's surface at the spot where the measurements are taken, the inability to determine precisely the altitude of topographic features below the aircraft at various altitudes, etc.

In this connection, altimeters have been constructed to measure directly the relative altitude of the aircraft in flight, independently of pressure and other atmospheric conditions. In this class belong accustical, optical, and radio altimaters.

The most important of these, from a flight standpoint, is the radio altimeter for low allitudes ranging from zero to 1,200 meters (see appended figure).

Principle of Operation of Redic Altimoter for Low Altitudes

The basic elements of the altirator and the transmitter and the receiver. The transmitter constantly emits electromagnetic impulses at frequencies varying continuously from 500 to \$50 megacycles.

Throughout the whole period of operation, the transmitter, by Lens of the transmitting antenna, sends to the ground signals of a definite frequency. These signals are reflected from the ground and reach the receiver via the receiving antenna.

-1-

	CLASSIFICATION				
MAYY	MSRD	LISTRIBUTION	<u> </u>		
AIR.	X Fai			1 11	

COMPRENTIAL

50X1-HUM

Simultaneously, in addition to the signals reflected by the earth the tuned circuit of the receiver receives signals directly from the transmitter.

Because of the fact that the distance traveled by the reflected signal is longer than that covered by the direct signal, the reflected signal reaches the receiving antenna with a certain time lag, which causes a difference between the frequencies of the two signals. When the direct signal and the reflected signal are combined, beats result and a corresponding voltage is set up in the antenna of the receiver.

The current corresponding to the beat frequency is then amplified in the amplifier of the receiver and conducted to the frequency meter, where it is converted into direct current having - voltage directly proportional to the beat frequency. The direct current is transmitted to the inficator of the altimeter and causes a displacement of the indicator hand.

Inassuch as both the best frequency and the voltage are directly proportional to the altitude, the altimeter can be calibrated in meters.

Construction of Radio Altimeter for Low Altitudes

The altimeter consists of the transmitters, the transmitting autenna, the receiver, the receiving antenna, the power source and the indicator.

The transmitter, receiver, and the power source are located in the cockpit; the receiving and transmitting antennas are placed under the vings of under the fuselage 2 - 3 maters apart. The indicator is built into the instrument panel.

To increase the precision of altitude readings, two scales are used on the indicator: from 0 to 120 meters and from 0 to 1,200 meters. Commutation from one scale to the other is by means of the commutator placed on the indicator.

The altimeter takes its power from the plane's 26-volt circuit. The weight of the ecaipment (without cables) is 12 kilograms.

Readings of the Altimeter in Flight

The radio altimeter always measures the shortest distance between the surface of the earth and the sircraft. When the sircraft is olimbing, the indicator hand moves in the direction of the higher readings in conformity with the increasing altitude. At an altitude of over 120 maters, it comes to a stop at the right end of the scale.

When the aircraft continues to climb to an altitude acceeding 250 to 30° meters, the indicator hand starts to full and may reach zero as a result of the fading of the reflected signal.

Although the equipment does not give faulty results at altitudes exceeding the limits of the first scale, nevertheless, when the altitude exceeding 120 meters, it is necessary to pass over to the second scale. When the aircraft as flying at an altitude exceeding the range of the school scale, at first the indicator hand stops at the right end of the scale, and upon centimeed ascentification as a result of the fading of the reflected signals.

CONFIDENTIAL




50X1-HUM

During long flights at altitudes exceeding the range of the second scale, the altimeter should be disconnected. During flight over uneven termin, the indicator of the altimeter may be observed to oscillate, conforming to the altitude of objects on the termin (elevations, ravines, mountains, buildings, etc.). During flight over a forest, the instrument indicates the distance between the ground of the aircraft. If the forest is very dense and leafy, the instrument innicates the altitude not from the ground, but from the leafy boughs of the trees.

The instrument does not react to elevation shead of the aircraft. In flight over sleep mountains with sharp peaks, the instrument indicates the altitude of the aircraft measured not from the summit of the mountain, but from the slope. The readings of the instrument become faulty and cannot be used.

In steep turns, the readings of the altimeter are unsteady and inaccurate.

Use of the radio altimeter at low altitudes in airforce units of the Soviet Army has proved that, in conjunction with other navigation and radio-navigation instruments, it can be applied successfully for instrument flying, for penetrating a low ceiling and for instrument landings.

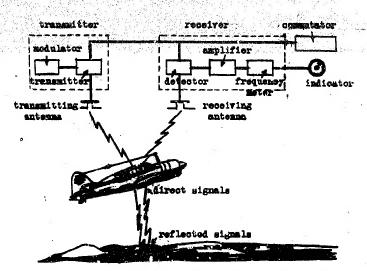

- E H D -

- 3 -

CONFIDENTIAL